

Corona Water Chiller


Instructions for use



*Member,
Water Quality
Association*

www.aqua-optima.com

Aqua Optima is a brand of the Strix Group.
Head Office: Strix Ltd. Isle of Man,
British Isles, IM9 2RG

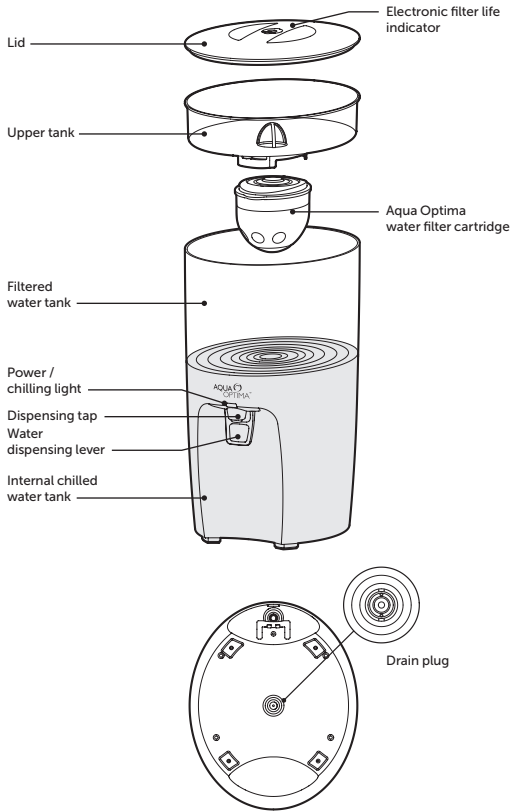

7. Always make sure that your hands are thoroughly dry before using or adjusting the switches on the appliance, or before touching the power plug or power connections.
8. Make sure that there is a gap of at least 5 cm between the ventilation slots on the rear of the chiller and any wall or surface.
9. Remove the plug from the electrical wall socket before pouring water into the filter compartment. Insert the plug back into the wall socket after the water has been poured into the filter compartment and the cover has been replaced.
10. Consume filtered water within one to two days.
11. To unplug the appliance, grip the plug and remove it directly from the power socket. Never pull the power cord to unplug the appliance.
12. Never use the appliance if the power cord or plug are damaged or if the appliance itself is faulty.
13. This appliance is designed for DOMESTIC USE ONLY and may not be used for commercial or industrial purposes. This appliance conforms to the 2006/95/EC and EMC 2004/108/EC directives.
14. Any changes to this product that have not been expressly authorized by the manufacturer may lead to the user's guarantee being rendered null and void.
15. Packaging must never be left within the reach of children since it is potentially dangerous.

WARNING

This product is intended to filter tap water only. Do not put water of unknown quality or that has been microbiologically impaired into the product. Use only cold or room temperature water. We recommend boiling water for use in the preparation of baby food.

BEFORE USING THE WATER CHILLER FOR THE FIRST TIME

- Remove all packaging.
- Remove the lid and extract the upper tank. Wash, rinse and dry thoroughly. Replace the upper tank.

ATTENTION: DO NOT PLUG THE UNIT IN OR INSTALL THE FILTER CARTRIDGE YET.

- Pour at least 2.5 litres of fresh water into the tank. Place a glass under the dispensing tap and push the water dispenser lever back to drain the water. Repeat this process several times, pouring each glass of water away.

NOTE: Keeping the water dispenser lever open allows the air in the internal chilled water tank to be replaced with water. This should remove any air blocks when the unit is first used, and after a few moments the water will flow through.

PREPARING THE AQUA OPTIMA WATER FILTER CARTRIDGE

Aqua Optima is a unique water filtration system developed to deliver the purest filtered water quickly – removing high levels of chlorine, limescale, organics, herbicides, pesticides, lead and other heavy metals.

1. Remove all packaging from the filter cartridge. There may be a small residue of black carbon particles in the bag or adhering to the cartridge body; this is normal.


IMPORTANT SAFEGUARDS

Necessary precautions must be taken when using electrical appliances, and these include the following:-

1. Make sure the voltage on the appliance rating plate corresponds to that of the mains electricity.
2. Never place the appliance on or close to sources of heat.
3. Make sure that the power cord does not come into contact with hot surfaces.
4. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
5. NEVER PLACE THE APPLIANCE BODY, PLUG OR POWER CORD IN WATER OR OTHER LIQUIDS; ALWAYS WIPE CLEAN WITH A DAMP CLOTH.
6. EVEN WHEN THE APPLIANCE IS NOT FUNCTIONING, REMOVE THE PLUG FROM THE ELECTRICAL WALL SOCKET BEFORE INSERTING OR REMOVING INDIVIDUAL PARTS OR BEFORE CLEANING OR REFILLING WITH WATER.

These particles are harmless and are washed off during the preparation process.

2. Soak the cartridge in a bowl of water for 5-10 minutes to remove all air bubbles.
3. Flush for 1 minute under a running tap.
4. The filter cartridge is now ready for use.

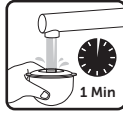

INSTRUCTIONS FOR USE

- Remove the lid and take out the upper water tank.
- Fit the water filter cartridge into the underside of the upper tank, rotating clockwise to lock into place. Ensure it is firmly secured.
- Re-insert the upper tank and pour in water until both the tanks are full. Water will flow through the filter at a set rate and may take some time due to the action of the filter cartridge.
- During normal use top up the tanks regularly.

Note: If the unit has been drained it is recommended to hold the water dispenser lever open with a glass while filling the tanks to stop air becoming trapped inside the unit. Once water flows through the tap, the dispensing lever can be released.

- Fit the lid, plug the unit into the electrical mains supply and switch on. The power/chilling light will illuminate blue and the motor will begin to chill the water.
- Dispense 2 litres of water from the unit to remove any unfiltered water and top up.
- When the light turns pale blue/white, the water will be cooled to approximately 10° C less than the ambient temperature. The motor switches on and off automatically to keep the water constantly fresh.
- Place a glass under the dispenser and push the lever back to dispense water.
- Top up the upper tank as required.

Note: It is possible to use the unit without power; in this case the water will be correctly filtered but will not be cooled.

REPLACING THE AQUA OPTIMA FILTER CARTRIDGE

Note: This water chiller is only intended for use with Aqua Optima water filters.

- Drain the water from the tanks and remove the lid.
- Take out the upper water tank and remove the filter cartridge by rotating it anti-clockwise.
- Insert the new filter cartridge as described previously and refit the upper tank and lid.

FILTER LIFE INDICATOR

The electronic filter cartridge life indicator will remind you when to change the filter cartridge and ensure optimum performance.

AQUA OPTIMA 30-DAY FILTER CARTRIDGE

To ensure the best performance, the filter cartridge should be changed after 100 litres, which is approximately 30 days of typical use.

After you have fitted the filter cartridge, press and hold the RESET button. The display will flash 30 and 60 alternately. Keep pressing until the display shows a steady 30. This

should take approximately 4-8 seconds. When it shows a steady 30, you can then release the button.

The display will show 30 and the counter will start. It will count down in days from 30 to 0.

Replace the cartridge when the display reaches 00 and begins to flash continuously.

Every time you replace the cartridge, reset the indicator again following the above instructions. If you accidentally set the wrong date for your filter, then simply start the procedure again.

AQUA OPTIMA 60-DAY FILTER CARTRIDGE

To ensure the best performance, the filter cartridge should be changed after 200 litres, which is approximately 60 days of typical use.

After you have fitted the filter cartridge, press and hold the RESET button. The display will flash 30 and 60 alternately. After 4-8 seconds, it will show 30. Keep pressing until the display shows a steady 60. This should take approximately 9-12 seconds. When it shows a steady 60, you can then release the button.

The display will show 60 and the counter will start. It will count down in days from 60 to 0.

Replace the cartridge when the display reaches 00 and begins to flash continuously.

Every time you replace the cartridge, reset the indicator again following the above instructions. If you accidentally set the wrong date for your filter, then simply start the procedure again.

CARE & MAINTENANCE

- Water is a foodstuff. We recommend using the filtered water within 2 days. If the appliance is not used for more than 48 hours fill it twice with cold water and empty the water before continuing to use it normally.
- Should the appliance not be used for an extended period of time (for example a holiday) we recommend that the filter is removed and placed in a clean plastic bag and stored in the fridge. This will help to maintain the filter when not in use. Before using the filter after storage, follow the preparation and fitting instructions for use as normal.

CLEANING

ATTENTION: NEVER PLACE THE APPLIANCE BODY, PLUG OR POWER CORD IN WATER OR OTHER LIQUIDS; ALWAYS WIPE CLEAN WITH A DAMP CLOTH.

- Wash, rinse and dry the upper tank and the lid regularly, at least when the filter cartridge is replaced.
- Do not use any washing-up liquid or anything that may taint the water. Don't use harsh or abrasive cleaning agents or solvents.

TO DRAIN THE WATER CHILLER COMPLETELY BEFORE STORING

Remove plug from the electrical wall socket and empty both tanks.

In the middle of the cable tidy, underneath the appliance, is a drainage plug which must be unscrewed to remove any residual water from the internal tank.